


Presentation Classroom Instructions For Holden Fine Arts Center 2107

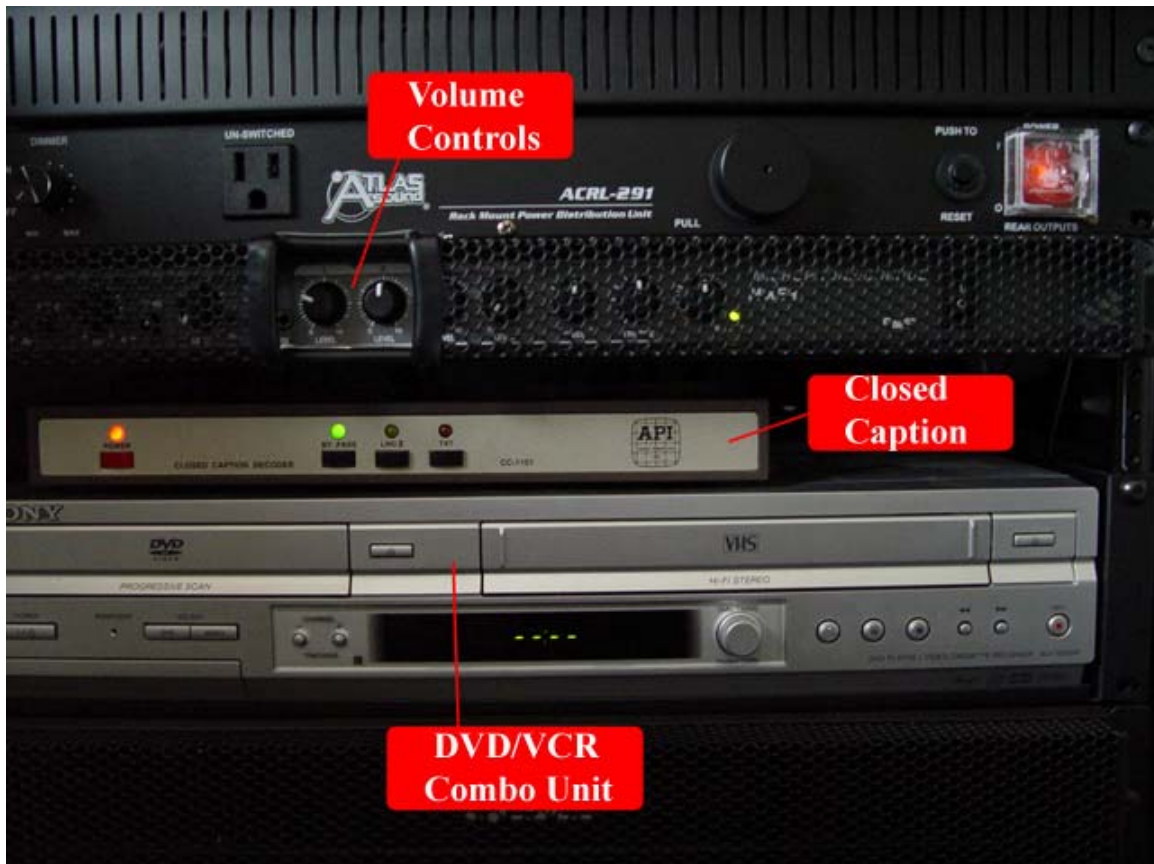

Presentation Classroom Instructions For Holden Fine Arts Center 2107

- **Displaying Computer through Projector**
- **Displaying a DVD through Projector**
- **Displaying a Video through Projector**
- **Adjusting the Volume Control**
- **Displaying a Closed Captioned Video through Projector**

If you need additional help call the Helpdesk at x 8300 or stop by McCaskill Hall 122

Presentation Classroom Instructions For Holden Fine Arts Center 2107

Displaying the Computer through Projector



1. Turn on the computer and log in as you normally would.
2. Lower the screen using the pull string.



3. Turn on the projector by pressing the power button on the remote.
4. Select the Computer 1 by pressing the Computer button on the remote.

Presentation Classroom Instructions For Holden Fine Arts Center 2107

DVD/VCR Combo Remote



- Turn on the Power (A)
- Make sure the TV/DVD and Video switch is on the DVD and Video (VCR) side (B)
- Select DVD or Video (C)
- Open/Close the DVD disc tray in DVD mode or eject the VHS tape in Video (VCR) mode (D)
- Tracking +/- in Video (VCR) mode (E)



Use the buttons in section G in both the DVD and Video modes to control playing, stopping, pausing, fast forwarding, and rewinding the DVD or video.

Section H:

- Press Top Menu and/or Menu - the disc's menu appears on the screen
- Press the up, down, left, and right arrows – to select the item to play or change in Menu mode
- Press Enter when the item is selected

Using the DVD player on a DVD/VCR
Combo



1. Turn on the DVD Player, press the Select DVD to control the DVD player.



2. Press the Open/Close button to open the disc tray and place the DVD disc on the disc tray. Press the Open/Close button again to close disc tray.



Or if using the DVD/VCR Remote:

- Turn on the Power (A)
- Make sure the TV/DVD and Video switch is on the DVD side (B)
- Press DVD (C)
- Press Open/Close (D) to open the disc tray, place the DVD on the tray, press Open/Close (D) to close the tray



3. Turn on the projector. Select Video 1 by pressing the video button on the remote.

a. Press the Top Menu or Menu (A) button to make the menu appear on the screen. Press the arrow

buttons (B) to select the item to play or change. Press the Enter button (C) when the item is selected.



Most DVDs give the viewer several options in the menu, Play Movie will start the movie, Select Scene/Chapter will start the movie from a certain scene/chapter. Use the Menu and Arrow buttons to use these functions.




4. When the Play Movie option has been selected from the menu, use play, stop, pause, fast forward, and rewind to view the movie.

Presentation Classroom Instructions
For Holden Fine Arts Center 2107
Using the VCR on a DVD/VCR Combo



1. Turn on the DVD/VCR, press the Select Video to control the VCR player

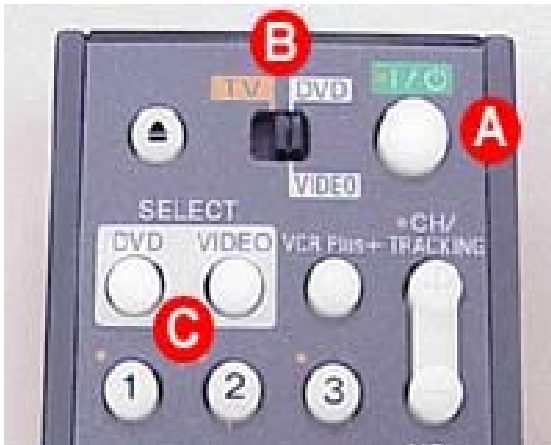

Or if using the DVD/VCR Remote:

- Turn on the Power (A)
- Make sure the TV/DVD and Video switch is on the Video side (B)
- Press Video (C)



2. Put the VHS tape in the VCR and use the VCR Remote to play, rewind, fast forward, stop, and pause your video.



3. Turn on the project. Select Video 1 by pressing the video button on the remote.

Presentation Classroom Instructions
For Holden Fine Arts Center 2107

Adjusting the Volume



To adjust the volume, use the controls on the Mixer.

****Please leave the settings on the Amplifier as they are.****

Presentation Classroom Instructions For Holden Fine Arts Center 2107

Displaying a Closed Captioned Video

 
If you have hearing impaired students in your class, you'll want to display captions whenever you show videos. Many videos have built-in captions.

To activate the caption decoder and make captions visible on the screen:

1. Look for the caption decoder. It is a thin box on top of the DVD/VCR combo.



2. Please do not press the red button on the front of the decoder. In a few moments, captions will appear on the screen. If they don't, it's probable that your video is not captioned.



If you do not want the captions to show, press the button labeled By Pass. The green light will appear and the captioning will stop.

Shut Down for HFAC 2107

1. Log off the computer like normal.
2. Turn off the Projector
3. Turn off the DVD/VCR Combo Player