

Presentation Classroom Instructions For Marcovich Wellness Center 2440



- **Using the AMX Remote System**
- **Adjusting the Volume**
- **Displaying a Video through Projector**
- **Displaying a DVD through Projector**
- **Displaying Computer through Projector**
- **Displaying Laptop through Projector**
- **Displaying the Document Camera through Projector**
- **Displaying Cable Television through Projector**

Marcovich Wellness Center 2440 Using the AMX Remote System

The Welcome Screen on the AMX



Press Start Session to begin, the screen will be lowered, and the projector will turn on. Any other equipment you plan to use needs to be manually turned on, by pressing the on/off buttons on the equipment.

The Source Menu Screen on the AMX



Select the equipment you want to use or make adjustments to:

- VCR
- DVD
- Computer
- Document Camera
- Volume

You may use End Session from this screen, which will raise the screen and turn off the projector. You need to manually turn off any other equipment (sources) you use.

Marcovich Wellness Center 2440 Using the AMX Remote System

The VCR Screen on the AMX



From this screen use play, stop, pause, fast forward, and rewind to view the movie. Other features you can control from this screen are the Close Caption option, the Channel Up and Channel Down (for use with cable television), and Volume.

Exit Source Menu will return you to the Source Menu Screen.

The DVD Screen on the AMX



From this screen use the DVD Menu button to access the DVD's menu. Use play, stop, pause, fast forward, rewind, skip fast forward, and skip rewind to view the DVD. Other features you can control from this screen are the Close Caption feature and Volume.

Exit Source Menu will return you to the Source Menu Screen.

Marcovich Wellness Center 2440
Using the AMX Remote System

The Computer Screen on the AMX



Select the Computer or Laptop. The other feature you can control from this screen is the Volume.

Exit Source Menu will return you to the Source Menu Screen.

The Document Camera Screen on the AMX



The message **“Please Operate this Document Camera Manually.”** appears on this screen. You must use the controls on the Document Camera. The only feature you can control using this screen is the Volume.

Exit Source Menu will return you to the Source Menu Screen.

Marcovich Wellness Center 2440
Using the AMX Remote System

The Volume Screen on the AMX



Turn the Volume up or down using this screen.

Exit Source Menu will return you to the Source Menu Screen.

The End Session Screen on the AMX



The message **“Do You Really Want to End the Session? Ending a Session Powers Down the Projector and Sources. Please Remove all Media (Tapes, etc) Before Ending the Session!”** appears on this screen. Select Yes or No.

**At this time, ending the session does not power down the VCR, DVD player, or Document Camera, you need to manually turn those sources off **

Marcovich Wellness Center 2440
Adjusting the Volume



The Volume can be controlled from the Source Menu or any of the equipment screens.

Marcovich Wellness Center 2440 Displaying a Video through Projector



1. Turn on the VCR, lower the face plate and insert your VHS tape.



2. Press Start Session on the AMX Remote System. The screen will be lowered, and the projector will turn on.



3. Press VCR on the Source Menu screen.



4. Use play, stop, pause, fast forward, and rewind to view the movie. Press Close Caption to use this feature.



5. Press Exit Source Menu to return to the Source Menu Screen when you are finished with the VCR.

Marcovich Wellness Center 2440 Displaying a DVD through Projector



1. Turn on the DVD player, press the Open/Close button to open the disc tray and place the DVD disc on the disc tray. Press the Open/Close button again to close disc tray.



2. Press Start Session on the AMX Remote System. The screen will be lowered, and the projector will turn on.



3. Press DVD on the Source Menu screen.



4. Use play, stop, pause, fast forward, rewind, skip fast forward, skip rewind and the DVD menu to view the movie. Press Close Caption to use this feature.



5. Press Exit Source Menu to return to the Source Menu Screen when you are finished with the DVD player.

Marcovich Wellness Center 2440 Displaying Computer through Projector



1. Turn on the computer and log in as you normally would.



2. Press Start Session on the AMX Remote System. The screen will be lowered, and the projector will turn on.



3. Press Computer on the Source Menu screen.



4. Press Computer, use the computer as you normally would.



5. Press Exit Source Menu to return to the Source Menu Screen when you are finished with the computer.

Marcovich Wellness Center 2440 Displaying Laptop through Projector



1. Connect the laptop with the cables on the desk.

White – Network cable

Black (left)– External Monitor cable

Black (right) – Audio cable (plug into the headphones jack)



2. Plug the laptop into the Power Center.



3. Press Start Session on the AMX Remote System. The screen will be lowered, and the projector will turn on.



4. Press Computer on the Source Menu screen.



5. Press Laptop, use the laptop as you normally would.



6. Press Exit Source Menu to return to the Source Menu Screen when you are finished with the laptop.

Marcovich Wellness Center 2440 Displaying the Document Camera through Projector



1. Press Start Session on the AMX Remote System. The screen will be lowered, and the projector will turn on.



2. Press Document Camera on the Source Menu screen.



3. The message **“Please Operate this Document Camera Manually.”** appears on this screen. You must use the controls on the Document Camera.



4. Turn on the Document Camera.

5. Place the materials to display on the Document Camera and use the zoom in and out controls as needed.



6. Press Exit Source Menu to return to the Source Menu Screen when you are finished with the Document Camera.

Marcovich Wellness Center 2440 Displaying Cable Television through Projector



1. Press Start Session on the AMX Remote System. The screen will be lowered, and the projector will turn on.



2. Press VCR on the Source Menu screen.



3. Use the Channel Up and Channel Down buttons to change the channels.



4. Press Exit Source Menu to return to the Source Menu Screen when you are finished using the Cable Television.

Marcovich Wellness Center 2440
Shut Down

1. Log off the computer like you normal.
2. Turn off the VCR.
3. Turn off the DVD player.
4. Turn off the power and lights on the Document Camera.
5. Press the End Session button on the AMX



The message **“Do You Really Want to End the Session? Ending a Session Powers Down the Projector and Sources. Please Remove all Media (Tapes, etc) Before Ending the Session!”** appears on this screen. Select Yes or No.